
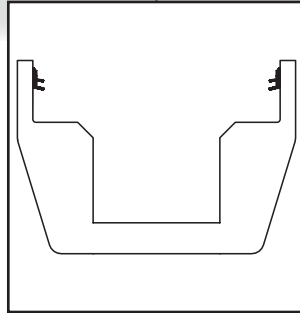


Einbauanleitung

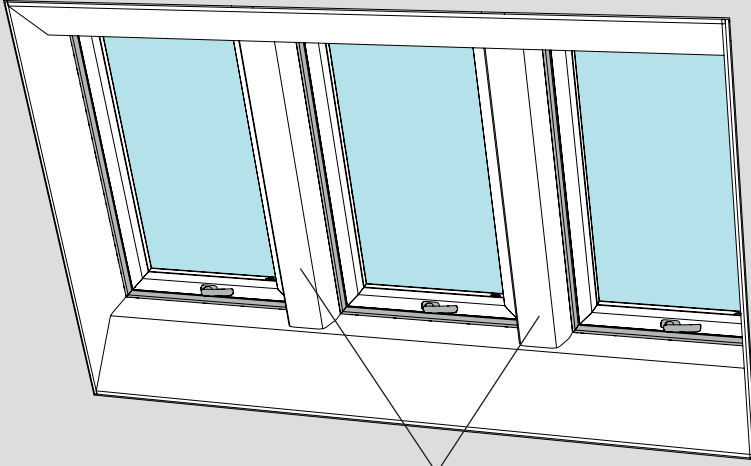

ZIN EKS R6/R8 HW

EN Installation manual

FR Instructions de montage

NL Montagehandleiding

IT Guida per il montaggio

ES Instrucciones de montaje

PT Instruções de instalação

PL Instrukcja montażu

CZ Montážní návod

SK Návod na montáž

SI Navodila za vgradnjo

RU Руководство по монтажу

GR Οδηγίες τοποθέτησης

EE Paigaldusjuhend

LV Uzstādīšanas instrukcija

LT Montavimo instrukcija

RO Manual de montare

HU Beépítési útmutató

HR Upute za ugradnju

BG Монтажна инструкция





..... 3



..... 4



..... 5



..... 12





roto-extra.com






- DE Sicherheitshinweise
- EN Safety information
- FR Indications de sécurité
- NL Veiligheidsinstructies
- IT Indicazioni sulla sicurezza
- ES Indicaciones de seguridad
- PT Indicações de segurança
- PL Wskazówki bezpieczeństwa
- CZ Bezpečnostní pokyny
- SK Bezpečnostné pokyny
- SL Varnostna navodila

- RU Указания по технике безопасности
- GR Υποδείξεις ασφαλείας
- EE Ohutusjuhised
- LV Drošības norādījumi
- LT Saugumo instrukcijos
- RO Indicații de securitate
- HU Biztonsági utasítások
- HR Sigurnosne upute
- BG Указания за безопасност





Ø 8mm

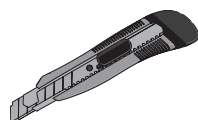

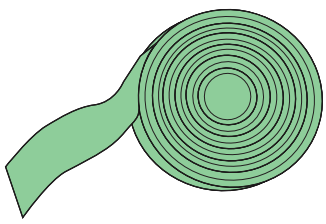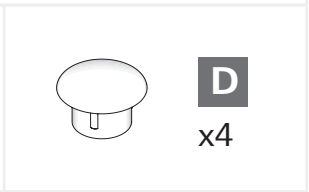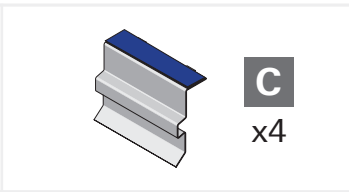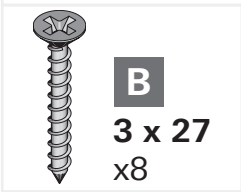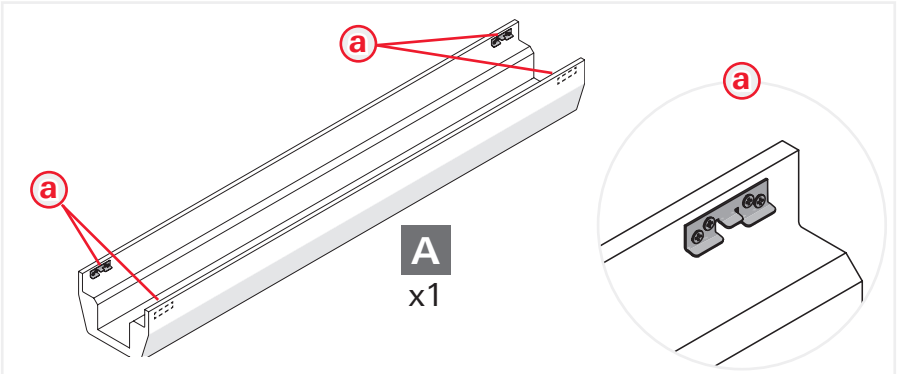




1

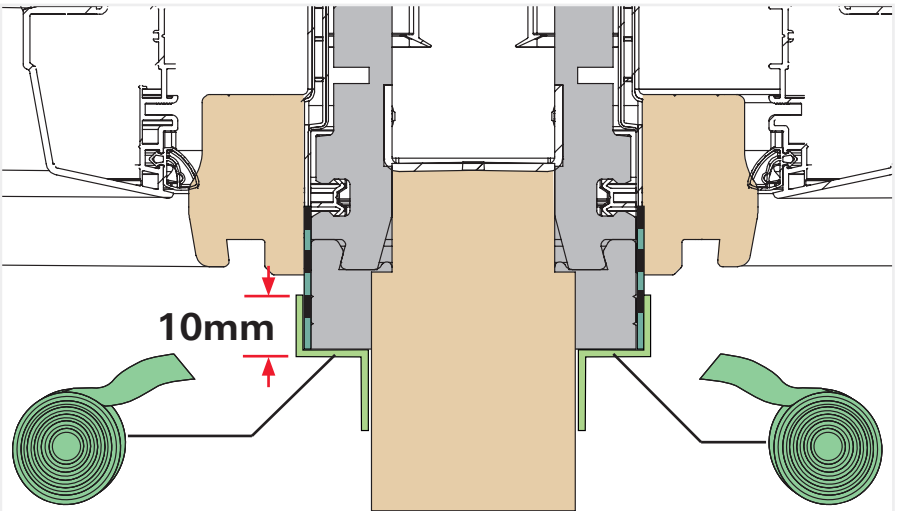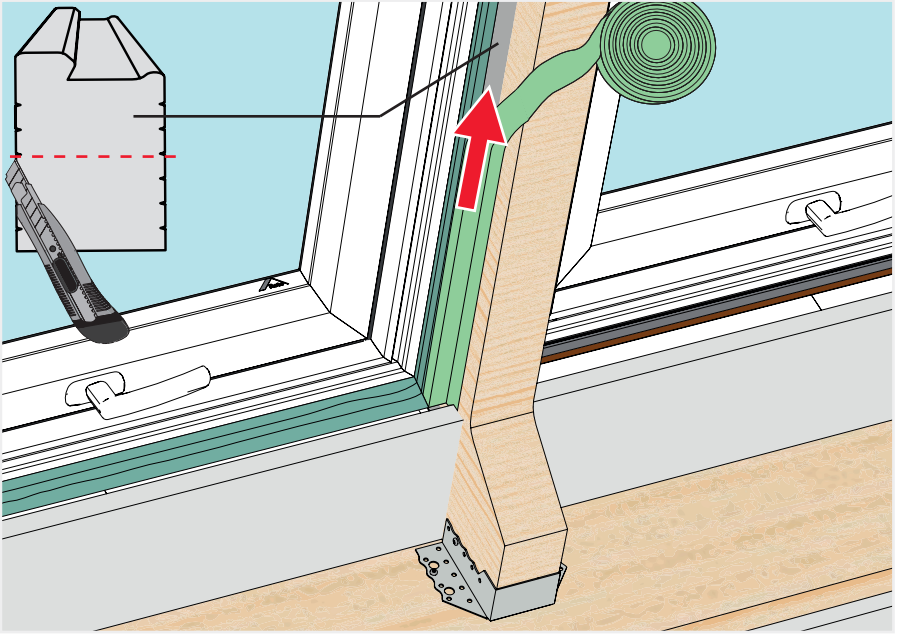





2



B






C

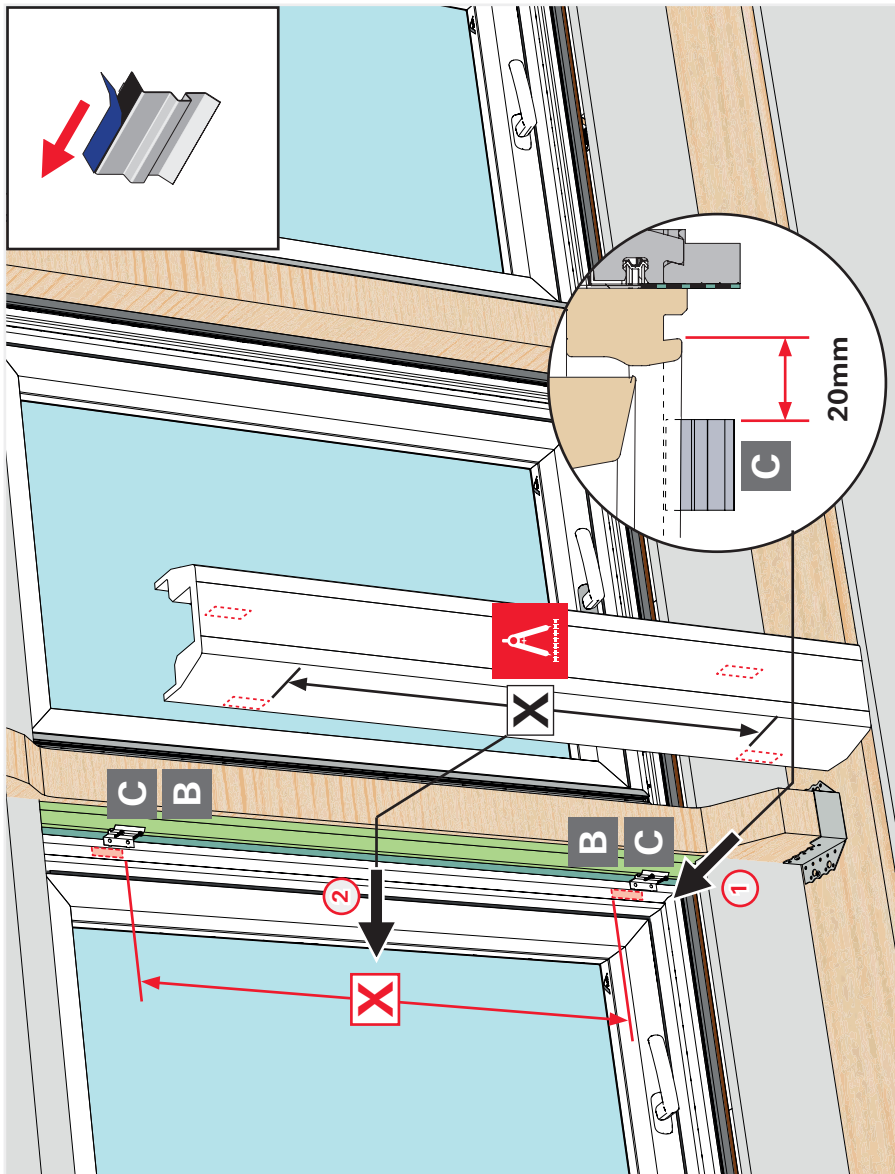




3

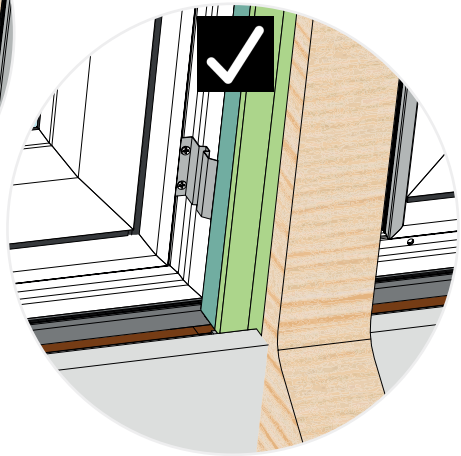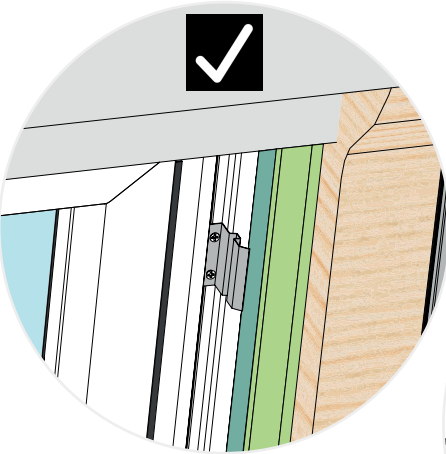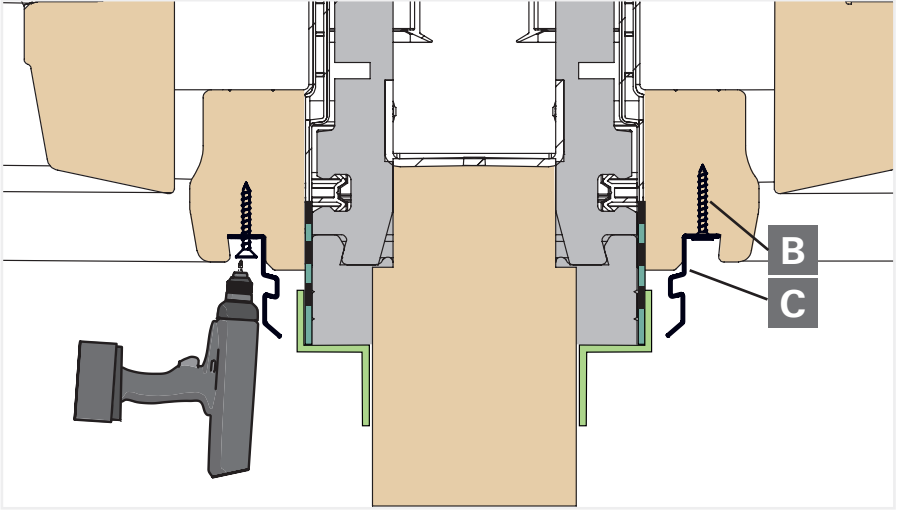




4




A

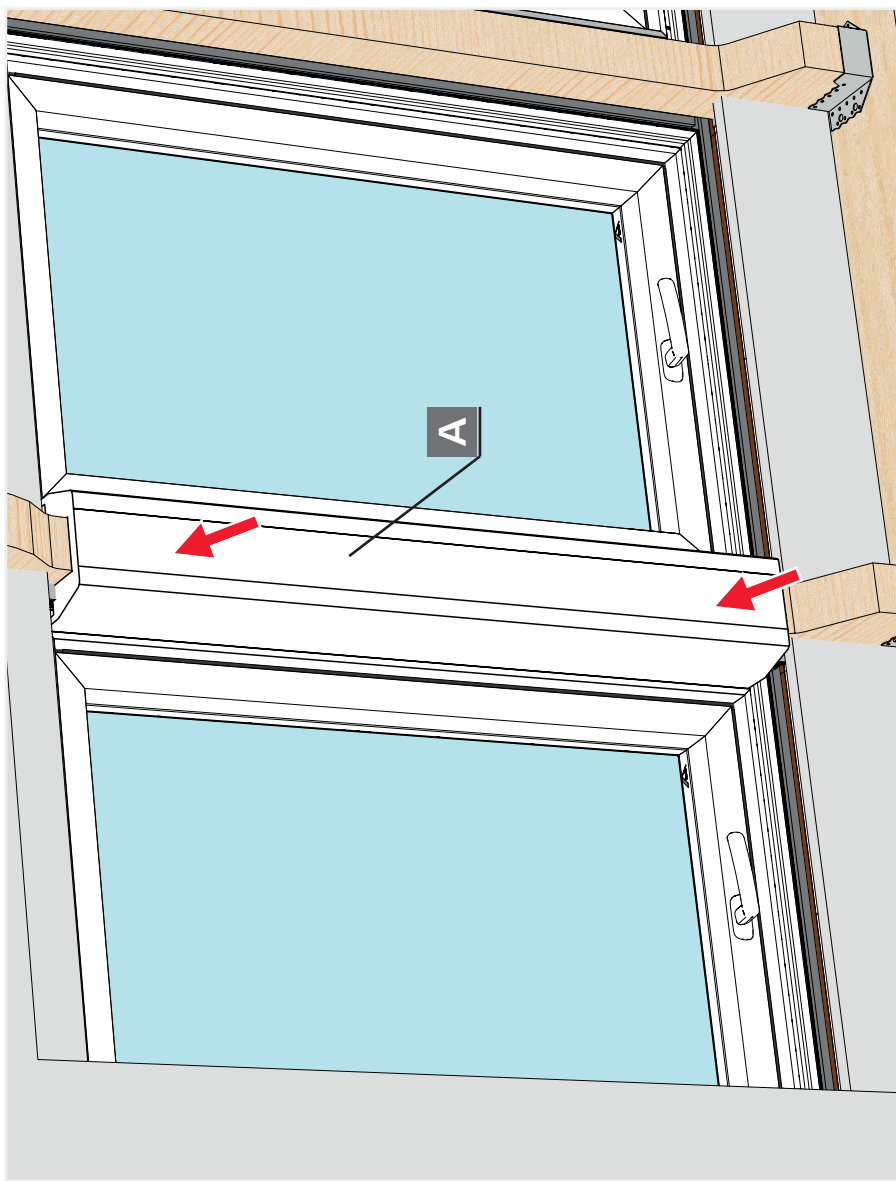




4

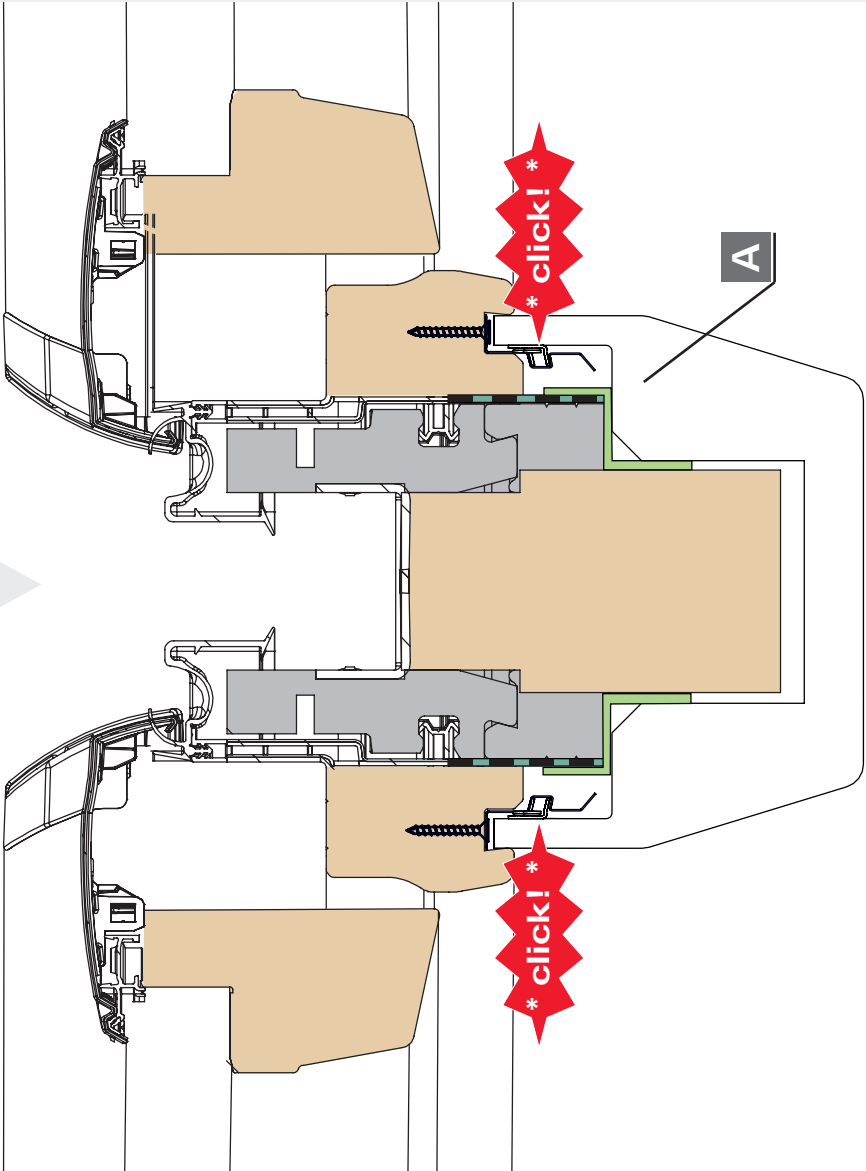





5

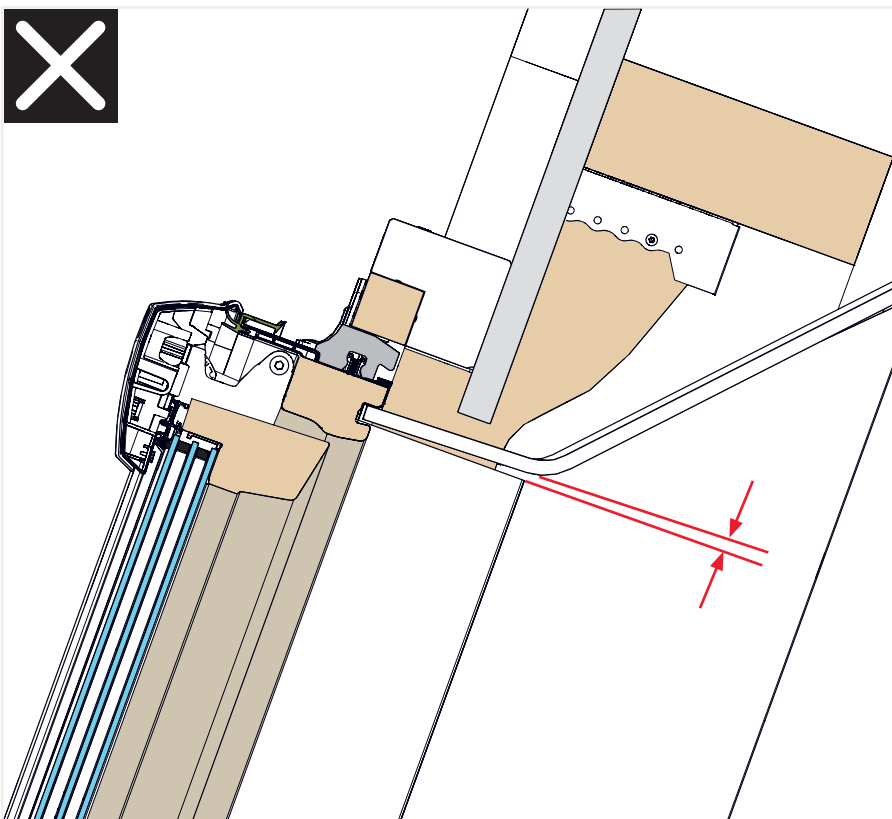



5

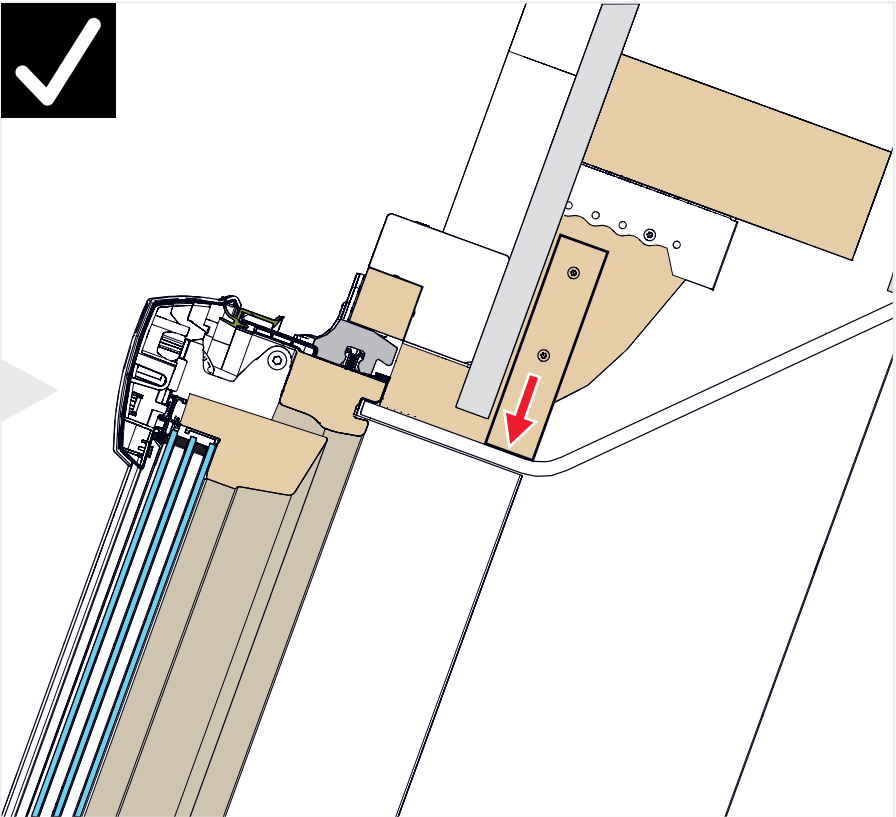





i





ø 8mm



D

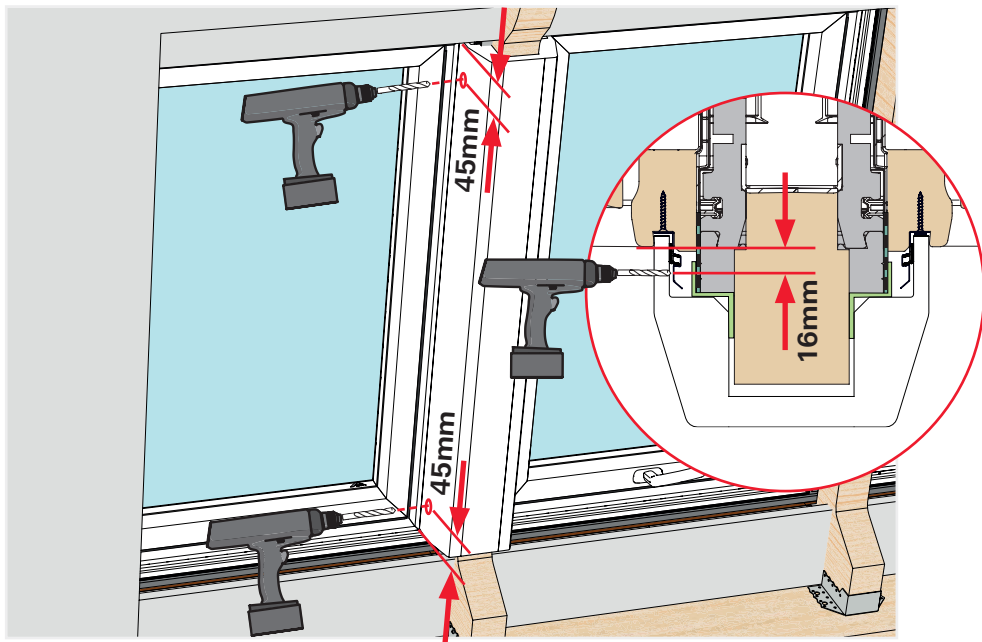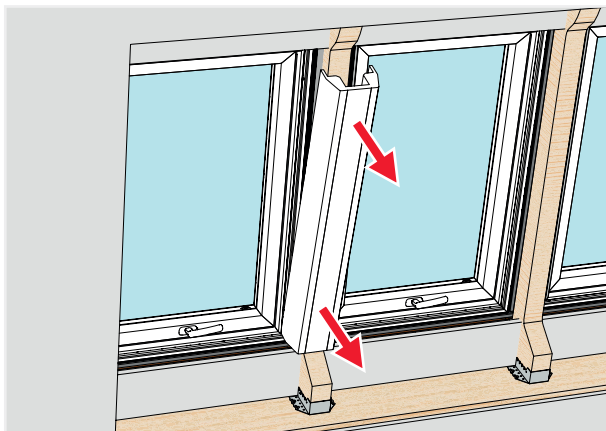

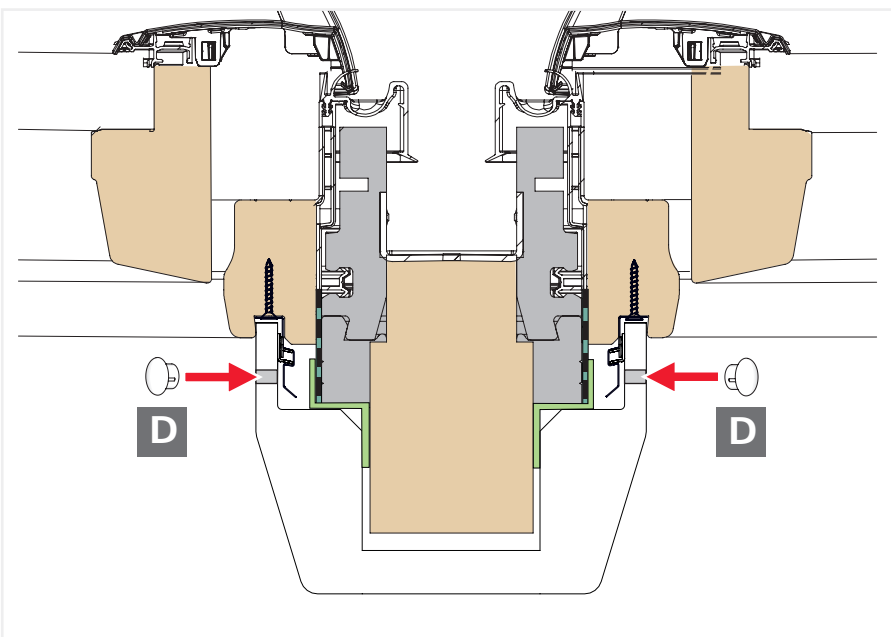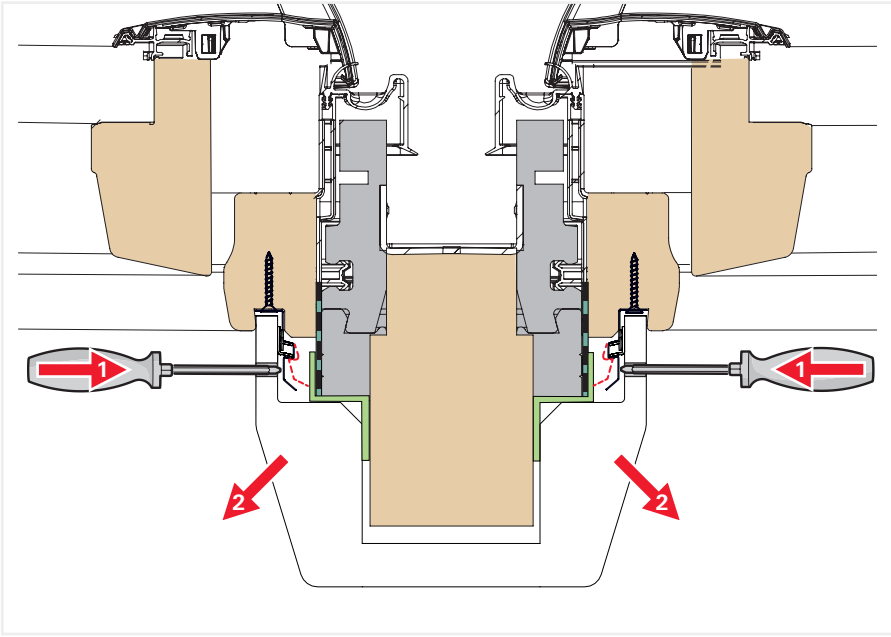







The roof window.



www.roto-contacts.com



www.roto-extra.com

Roto Frank DST Vertriebs-GmbH
Wilhelm-Frank-Straße 38-40
97980 Bad Mergentheim
Deutschland

